

MINI CHIME & ALARM

Entry Chime or Powerful Alarm

Product Code: EL00024

Introduction

The Defender Mini Chime and Alarm can be set to sound either an entry chime or a powerful 120dBs alarm. Simply use the switch to toggle between the different modes to either notify the presence of welcomed guests with a chime or sound an alarm for intruders. The unit can also be turned off when not needed.

Operation

1. To arm the unit in alarm mode

Toggle the Alarm/Chime/Off switch to the 'Alarm' position. When the fixture is opened (causing sensors to be more than 1.5cm apart) the alarm will sound continuously until the door is shut or unit is disarmed.

2. To arm the unit in chime mode

Toggle the Alarm/Chime/Off switch to the 'Chime' position; the unit will now sound a chime when the fixture is opened.

3. To disarm the unit

Toggle the Alarm/Chime/Off switch to the 'Off' position and the unit will make no sound when the fixture is opened.

Battery replacement

This unit operates on 4 x LR44 batteries. It is recommended that the alarm is tested regularly. If the alarm sounds weak, the batteries should be replaced. To replace the batteries:

1. Slide off battery cover at the front of the main unit.
2. Push the button labelled 'BATTERY' inside the battery compartment.
3. If the green light illuminates then the battery still has power. If it fails to illuminate then replace all batteries.
4. Insert 4 x LR44 batteries noting the correct polarity.
5. Slide the battery cover back on the front of the unit.

Care and maintenance

To test, use a cloth to cover the siren in order to reduce the risk of hearing damage. Improper use or man-made damage is not covered under the guarantee. To clean the unit use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolour the unit.

WARNING

The high output siren fitted to this quality alarm may cause ear damage if used at close range for a prolonged period of time. Keep away from children and pets ears. This product is designed for use as a deterrent; it does not guarantee protection or personal safety.

CAUTION

- When testing the alarm, make sure you hold it at least at arm's length away from your ear.
- DO NOT MODIFY THE ALARM.
- The power source or propellant has a finite / limited life.
- The alarm should be kept out of reach and audible range of children and pets.
- Remove batteries before storing the unit over extended periods of time. Batteries corrode over time and may cause permanent damage to the unit.

Note:

Performance may be adversely affected following prolonged exposure to extreme temperatures.

Defender Security Products

Unit 40
Manor Industrial Estate
Flint, Flintshire
CH6 5UY



Defender[®]
SECURITY PRODUCTS
Your Safety is Our Expertise