

PIR ALARM WITH KEY FOB

Motion Activated Household Alarm


Product Code: EL00194

Introduction

The Defender PIR Alarm with Key Fob is a simple, user-friendly indoor alarm unit, perfect for installing in important rooms or access locations. Armed and operated using either the key fob or the buttons on the side of the alarm, the device produces a 130dBs siren whenever the 8m PIR sensor is breached. The alarm is battery operated and requires 2 x AA batteries, which are included.

Contents

- 1 x PIR Alarm Unit
- 1 x Key Fob
- 1 x Mounting Bracket
- 1 x Adhesive Pad
- 2 x Fixing screws and wall plugs
- 2 x AA & 1 x CR2032 Batteries

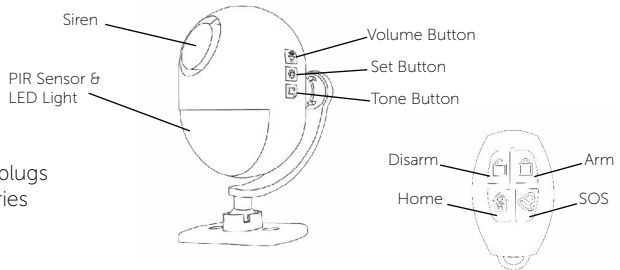

Battery Installation

Please note: the PIR Alarm and Key Fob come with batteries installed, please remove battery tab before first use. The battery compartment is accessed from the rear of the alarm unit by removing the battery cover. Insert 2 x AA batteries (included) noting the correct polarity. The unit will beep once to indicate the batteries are installed correctly. The unit is now ON. The LED light will illuminate when the batteries need replacing in the alarm unit. To replace the batteries, repeat the steps above.

NOTE: The battery compartment contains an anti-tamper function, meaning the alarm will sound when the battery cover is removed **even if the alarm is disarmed**. To change the batteries or access the compartment, first turn the unit OFF by long pressing the Set button, until the alarm beeps five times. The unit is now OFF and the batteries can be accessed.

The remote fob uses 1 x CR2032 battery. To replace, unscrew the screw at the base of the fob to and open the fob. Replace the battery, noting the correct polarity.

Operating the Alarm Unit

To turn the unit ON, press and hold the Set button until the unit beeps once.

Note: when installing batteries, the unit will auto switch ON after the batteries are inserted.

To turn the unit OFF, long press and hold the Set button until the unit beeps five times.

To arm the alarm press the Set button once and the unit will beep once for arm.

To disarm the alarm press the Set button once and the unit will beep twice for disarm.

Press the Tone button to select the desired alarm tone. Each tone will sound briefly (six in total) as you press. When you hear your preferred tone, simply stop pressing and it will auto save.

Press the Volume button to select the desired sound level (five in total). It will auto save as above.

Adding and Removing Fobs

Press and hold the Volume button on the unit until the LED light comes on. When the light comes on, press any button on the fob.

Two beeps means the fob has been paired successfully.

One beep means the fob has already been paired to the unit.

Three beeps means the unit cannot be paired with any more fobs (max 20 per unit).

To remove all fobs linked with the unit, press and hold the Tone button until the LED light comes on. Then press and hold the Tone button again until the unit beeps four times.

Operating the Alarm with the Fob

As long as the unit is ON, it can be armed and disarmed using the fob.

To arm the alarm, press the Arm button on the fob. The unit will beep and flash once.

To disarm the alarm, press the Disarm button on the fob. The unit will beep and flash twice.

To activate the alarm instantly in an emergency, press the SOS button. The siren will sound, regardless of the alarm being armed or disarmed.

To alter the alarm tone, press the Home button on the fob once. Each tone will play as you press, simply stop on your preferred sound.

Installation

The diverse accessories included with the kit means the alarm can either be installed hanging from a ceiling, fixed to a wall, or free standing. **INDOOR USE ONLY**

To mount, first affix the ball mount into the rear of the alarm.

WALL: Mark and screw the mount to the wall through the two guide holes. Insert the ball mount affixed to the unit into the gap and secure.

CEILING: Mark and screw the mount to the ceiling through the two guide holes. Insert the curved link piece into the mount by pressing the ball into the socket on the mount. Then press the ball mount affixed to the unit into the socket on the link piece and secure. Adjust as needed.

To have the alarm free standing, follow the steps in Ceiling but use the mounting bracket as a base on the flat surface of your choice.

You can also use the adhesive pad to install the alarm. Simply affix one side of the pad to the rear of the battery compartment and fix to your desired location.

NOTE: When installing or moving the alarm, always ensure the alarm is set to OFF, to avoid false alarms or triggering the anti-tamper on the battery compartment.



Defender Security Products

Unit 40
Manor Industrial Estate
Flint, Flintshire
CH6 5UY



Defender[®]
SECURITY PRODUCTS
Your Safety is Our Expertise