

ULTRA SLIM VIBRATION ALARM

Modern shock sensor alarm for windows/doors

Product Code: EL00230

Introduction

The Ultra Slim Vibration Alarm can be instantly affixed internally to any door or window. When armed it will respond to any banging or forced entry attempt by releasing a piercing 130dBs siren, sure to deter any intruders and attract attention.

Operation

Before first time use please remove the battery tab (see Battery section below).

Toggle the side switch between ON/OFF to activate/deactivate the alarm.

When set to ON, over a period of 3 seconds a red LED will flash 5 times and a short beep will sound - your alarm's shock sensor is now active and direct vibration around your installation area will trigger it.

When triggered the siren will sound continuously for 30 seconds and stop. Any additional vibration will trigger the alarm again and repeat the cycle.

When set to OFF, the alarm immediately ceases vibration detect mode. You can also switch to OFF to silence an existing siren.

Installation - NOTE: FOR INTERNAL USE ONLY

Your alarm has an adhesive sticker on one side which doubles as a visual deterrent. Peel the protective film and firmly apply the sticker to your chosen location.

These alarms are primarily designed for install on glass panes for windows/doors, but can also be utilised in other areas e.g. on shed doors or door handle plates.

If removal is required, gently pry the unit away from the surface with your hands or with a flat-head screwdriver. Any remaining adhesive can be washed and wiped away.

Batteries and Replacement

The alarm is powered by 3 x LR44 batteries within the sliding compartment on the non-sticker side of the unit. Before first use, pull the small plastic tab protruding from the compartment to allow power to flow.

Your unit has a low battery indicator; the red LED will flash approximately once per second and indicates the batteries should be changed asap. To do this, slide down the compartment, replace batteries with correct polarity and re-insert the compartment.

ULTRA SLIM MAGNETIC CHIME & ALARM

Modern entry sensor for windows/doors

Product Code: EL00232

Introduction

The Ultra Slim Magnetic Chime & Alarm comes with an alarm unit and a magnetic contact strip. Together they can be instantly affixed internally to the openings of any door or window. With both alarm and chime setting options, you can choose to either announce visitors with a chime or deter intruders with a shocking 125dBs alarm.

Operation

Before first time use please remove the battery tab (see Battery section below).

Note: *If a mode is chosen and the door/window is open, the alarm/chime will sound instantly. Always set and reset with the door/window closed.*

Toggle the side switch between ALARM/OFF/CHIME to activate/deactivate the alarm. When set to ALARM, if the contact is broken, siren will sound for 30 seconds or until the contact is closed again. This cycle will repeat during every breaking of the contact. When set to CHIME, if the contact is broken a notification chime will sound. This will repeat every time the contact is broken.

When set to OFF, the alarm immediately ceases either detection mode. You can also switch to OFF to silence an existing siren or chime.

Installation - NOTE: FOR INTERNAL USE ONLY

Both parts of your unit have adhesive stickers on one side. Peel the protective film and firmly apply the unit's components to your chosen location.

Installing one component on the frame and the other on the door/window, ensure the contact strip is always on the RIGHT side of the alarm (follow the arrow) and there is a gap of no more than 10mm between them.

If removal is required, gently pry the unit away from the surface with your hands or with a flat-head screwdriver. Any remaining adhesive can be washed and wiped away.

Batteries and Replacement

The alarm is powered by 3 x LR44 batteries within the sliding compartment on the non-sticker side of the alarm unit. Before first use, pull the small plastic tab protruding from the compartment to allow power to flow.

Your unit has a low battery indicator; the red LED will flash approximately once per second and indicates the batteries should be changed asap. To do this, slide down the compartment, replace batteries with correct polarity and re-insert the compartment.