

ULTRA SLIM DOOR HANDLE ALARM

Vibration alarm with hanging cord

Product Code: EL00237

Introduction

Internally installed on door handles, the unit's vibration sensor detects both forced and sneak entry attempts, releasing a 125dBs siren.

Important Notes

This unit has an On/Off switch on the side. Keep the switch set to Off when installing or moving the unit, to avoid the siren activating near you.

First Time Use / Installation

Before first time use pull the battery tab from the front compartment. Check the unit is set to Off.

Choose the door handle you wish to protect and affix the hanging cord around the handle securely, using the tightening piece to ensure a good fit, so it does not fall off when a handle is used.

If you wish, you can also affix the adhesive pad to the door itself, though note this can turn the unit into more of a forced entry vibration alarm and potentially reduce the detection of actual door handle attempts. Always test the best result for your environment and note that the adhesive, whilst reusable, can be a little strong to remove on some surfaces.

Operation

Once securely installed, slide the switch to On. There will be a 7 second exit delay before the unit issues a single beep. The unit is now armed and the siren will be activated in the event of vibration.

Use the 7 second exit delay to double check the alarm is not moving or swinging, to avoid false activations.

If the unit detects vibration whilst On, the siren will sound immediately for 30 seconds, or until turned Off. If the unit is not turned Off it will reset itself for 7 seconds and activate again if additional vibration is detected.

Batteries and Replacements

The unit comes with 3 x LR44 batteries installed. Check the batteries semi-regularly and change them if you notice the volume getting lower. To change the batteries slide down the front compartment and replace with fresh LR44's, noting the correct polarity.